

Blueair 550E/650E settings



- Press the green POWER key to turn the unit on and off. The unit automatically runs on the highest speed for five minutes after it is turned on to provide fast initial cleaning and then switches to Auto Mode.
- Press the SPEED key to regulate operating speed manually.
 - Use Speed 1 for nighttime use.
 - Use Speed 2 for daytime use.
 - Use Speeds 3 and 4 for fast initial cleaning or for larger rooms.
 - Use Auto Mode to let the electronic gas and particle sensors automatically adjust the operating speed according to the level of particles and gaseous compounds in the air.
- Press the TIMER key before turning the unit on to set the time when the unit will turn on or off. Otherwise the start speed will be set to Auto Mode. Use the PRESET key on the remote control to alternate between ON TIME and OFF TIME.

- ON TIME. Choose a time intervals in 30-minute intervals from between a half hour and 9.5 hours.

- OFF TIME. Choose a time interval when you want the unit to turn itself off. The preset time intervals are 1, 2, 4 and 8 hours. Use the + or – keys on the remote to increase or decrease the interval in increments of 30 minutes (0.5 hours). The screen displays the remaining time until the unit turns off.

- REPLACE FILTER LIGHT. When the light-emitting diode turns red, it's time to change your Blueair filters. To keep your air purifier in top operating condition, Blueair recommends filter replacement every six months. To reset the filter indicator light, simply hold the timer button down for approximately 10 seconds.

- ELECTRONIC PARTICLE SENSOR. When particle levels are low, the digital display shows a happy face; when particle levels exceed acceptable levels, a sad face is displayed, indicating the need for a higher operating speed or a switch to auto mode.

- ELECTRONIC GAS SENSOR. A happy face on the digital display means that your Blueair 550E/650E is maintaining good indoor air quality by reducing gaseous contaminants to low levels. When levels are exceeded, a sad face is displayed, indicating the need for a higher operating speed or a switch to auto mode.

- REMOTE CONTROL. Enjoy the convenience of managing all these functions using the remote control from distances of up to 20 feet away.

